

Design Specification: PLPI Assembly Control Software
VMP/A5/0007/09/v12

Author _____ Date _____

Adarsh Santhosh
Jr. Business Analyst

Reviewer _____ Date _____

Amit Sanandiya
Project Manager

Reviewer _____ Date _____

Beauty Dadhaniya
Quality Specialist / RP

Approver _____ Date _____

Semerab Tewolde
Qualified Person (QP) /RP /RPi

TABLE OF CONTENTS

1. Introduction.....	4
1.1 Purpose of the document.....	4
1.2 Scope.....	4
1.3 Abbreviations	4
2. Overall Description.....	4
3. Design Specification (As per URS)	4
3.1 Remove GTIN no column from certain modules	4
3.2 Remove certain columns from Product module	10
3.3 Check list – Master BAR Verification	11
3.4 Hide modules – FMD Print Label, EMVO Reports, Product EMVO Reports, Decommissioning, EMVO Stolen and Indented for Destruction, External Batch Summary & External Batch Scanning	13
3.5 Changes like Removal & Adding of fields to be made in the Master BAR and Sample BAR.....	14
3.6 Delink/Remove Retention sample and Commission	16
3.7 Windsor Framework in Product module and Alert pop-up in BNS Batch Add	18
3.8 Rename certain columns in Product add module	19
3.9 Found Satisfactory Alert in BNS Batch Add	21
3.10 Raw products Scan column – Product Module	21
3.11 To generate 2 new modules - Raw Pack Scanning & Raw Pack Scanned Summary	23
3.12 Damage/Regulatory sample input column in Release log sheet.....	24
3.13 Adding Print Mock-up button in BNS Batch Checker module and linked with Product module	25
Addendum Requirement	26
3.2 Removal of statement from process 1 of the BAR	26
3.5 Add certain button PRINT APPROVED CARTON, PRINT PEEL OUT & PRINT BRAILLE in BNS Batch creation module	27
3.6 Update in process 8 of Master BAR and Sample BAR	27
4.0 Additional Non-Functional Requirements	28
4.1 Audit Trail	28
4.2 Availability	29
4.3 Capacity Limits	29

Design Specification: PLPI Assembly Control Software
VMP/A5/0007/09/v12

4.4 Performance	29
4.5 Recoverability	29
4.6 Security Requirements	29
4.7 Error Handling	29
4.8 Usability	30
4.9 Accuracy & Validity	30

Design Specification: PLPI Assembly Control Software

VMP/A5/0007/09/v12

1. Introduction

As per the URS, there should be changes to be made in the PLPI system like disapplication of FMD safety features and other updates in the PLPI system as the implementation of Windsor Framework and onsite audits performed by third party contract providers which is mentioned in PLPI M_CC24-0007.

1.1 Purpose of the document

The purpose of the document defines the design specification of "PLPI Assembly control software" to meet the user's need as described in the User Requirement Specification (URS) & in URS Addendum 1 of PLPI Software.

1.2 Scope

This document outlines the functional aspect of disapplication of FMD and changes in PLPI assembly control software.

1.3 Abbreviations

These abbreviations are thought to help and understand the reading of the document.

IT	Information Technology
PLPI	Parallel License Parallel Import
URS	User Requirement Specification
FS	Functional specification

2. Overall Description

This section provides a general description of the software characteristics. It does not state specific requirements but it provides information that makes the requirements, defined in detail in the following sections so it is easier to understand.


3. Design Specification

This section describes the design attributes of the software that will be implemented in order to meet the requirement defined URS & in URS Addendum 1 of PLPI Software.

3.1 Remove GTIN no column from certain modules

Design Specification: PLPI Assembly Control Software VMP/A5/0007/09/v12

1. Product Module:

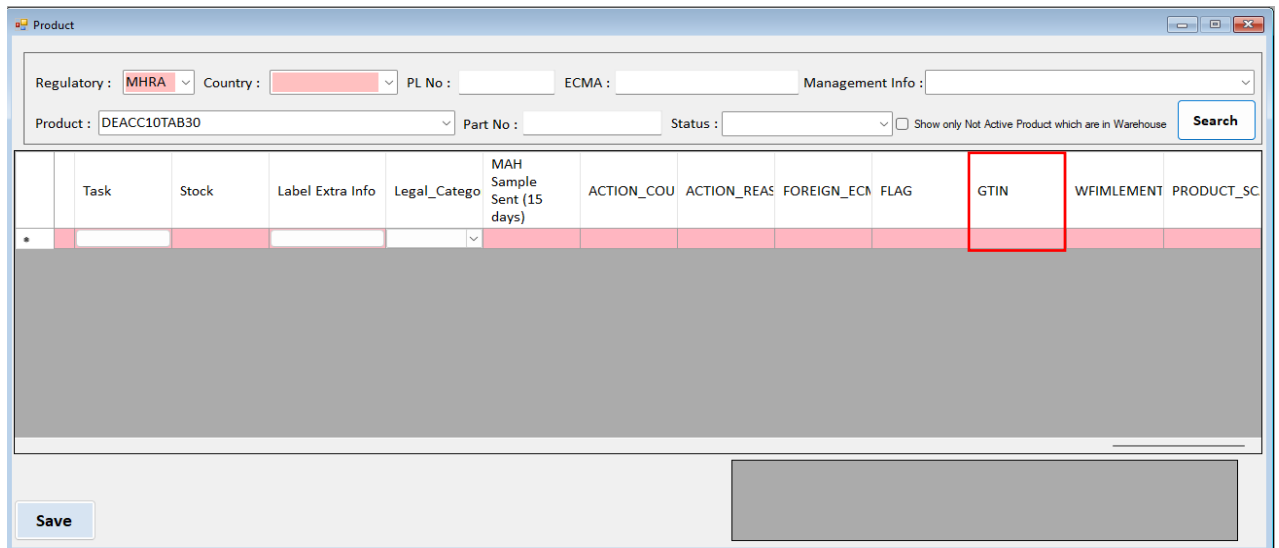


Product

Regulatory: **MHRA** Country: PL No: ECMA: Management Info:

Product: **DEACC10TAB30** Part No: Status: ☐ Show only Not Active Product which are in Warehouse **Search**

	Task	Stock	Label Extra Info	Legal_Catego	MAH Sample Sent (15 days)	ACTION_COU	ACTION_REAS	FOREIGN_ECM	FLAG	GTIN	WFIMLEMENT	PRODUCT_SC
*												

Save

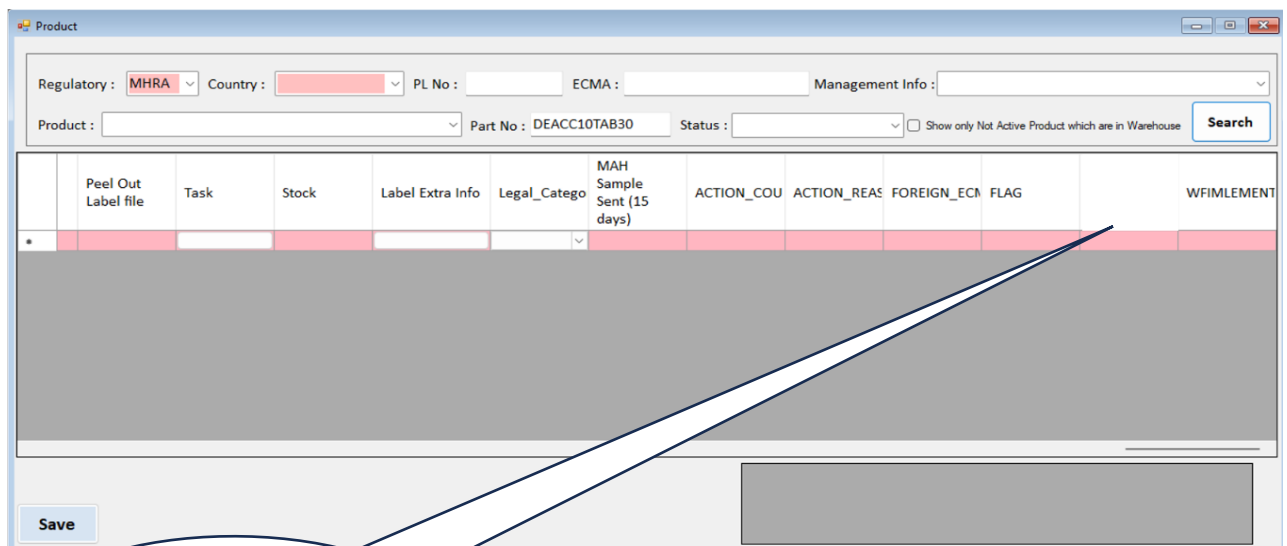

Product

Regulatory: **MHRA** Country: PL No: ECMA: Management Info:

Product: Part No: **DEACC10TAB30** Status: ☐ Show only Not Active Product which are in Warehouse **Search**

	Peel Out Label file	Task	Stock	Label Extra Info	Legal_Catego	MAH Sample Sent (15 days)	ACTION_COU	ACTION_REAS	FOREIGN_ECM	FLAG	WFIMLEMENT
*											

Save

GTIN column will not be displayed.

Design Specification: PLPI Assembly Control Software VMP/A5/0007/09/v12

2. BNS Batch Creation:

BNSBatchAdd

BNS Batch Creation

Country : Site : Category : Stock : Status :

JCT_ID	MFG_ID	ACTION_COUNT	OBJID	SPL_FLAG	CATEGORY	STOCK	GTIN	REGULATORY	PRODUCT_HUB_S	DECOMMISSION_S	LEGAL_CATEGOR
		8	AAAnu9ABrAAIby...		3	863	05056225800166	MHRA	DISTRIBUTED		POM
		8	AAAnu9ABrAAIcA...		3	863	05056225800166	MHRA	DISTRIBUTED		POM
		8	AAAnu9ABrAAIby...		3	863	05056225800166	MHRA	DISTRIBUTED		POM
		10	AAAnu9ABrAAIby...		3	0	05056225818888	MHRA	DISTRIBUTED		POM
		10	AAAnu9ABvAAJu...		3	0	05056225818888	MHRA	DISTRIBUTED		POM
		10	AAAnu9ABvAAJu...		3	0	05056225800180	MHRA	DISTRIBUTED		POM
		9	AAAnu9AAIAAO9...			0		MHRA	DISTRIBUTED		POM
		9	AAAnu9AAIAAO9...			0		MHRA	DISTRIBUTED		POM
		9	AAAnu9AAIAAO9...			0		MHRA	DISTRIBUTED		POM
		14	AAAnu9ABvAAJu...		3	13074	05056225809961	MHRA	DISTRIBUTED		POM
		15	AAAnu9ABrAAIb6...			349	05056225800203	MHRA	DISTRIBUTED		POM
		14	AAAnu9ABrAAIby...			21		MHRA	DISTRIBUTED		POM
		11	AAAnu9ABrAAIcB...			0		MHRA	DISTRIBUTED		POM
		11	AAAnu9ABrAAIby...			0		MHRA	DISTRIBUTED		POM
		9	AAAnu9ABrAAIby...		1	1286	05056225803310	MHRA	DISTRIBUTED		POM
		9	AAAnu9ABrAAIb1...		1	1286	05056225803310	MHRA	DISTRIBUTED		POM
		9	AAAnu9ABrAAIby...		1	1286	05056225803310	MHRA	DISTRIBUTED		POM
		9	AAAnu9AAuAALd...		1	1286	05056225803310	MHRA	DISTRIBUTED		POM
		9	AAAnu9AAuAALd...		1	1286	05056225803310	MHRA	DISTRIBUTED		POM
		9	AAAnu9AAuAALd...		1	1286	05056225803310	MHRA	DISTRIBUTED		POM
		10	AAAnu9ABrAAIcB...			8438		MHRA	DISTRIBUTED		POM
		10	AAAnu9ABrAAIb/...			8438		MHRA	DISTRIBUTED		POM

BNSBatchAdd

BNS Batch Creation

Country : Site : Category : Stock : Status :

JCT_ID	MFG_ID	ACTION_COUNT	OBJID	SPL_FLAG	CATEGORY	STOCK	REGULATORY	PRODUCT_HUB_S	DECOMMISSION_S	LEGAL_CATEGOR
		8	AAAnu9ABrAAIby...		3	863	MHRA	DISTRIBUTED		POM
		8	AAAnu9ABrAAIcA...		3	863	MHRA	DISTRIBUTED		POM
		8	AAAnu9ABrAAIby...		3	863	MHRA	DISTRIBUTED		POM
		10	AAAnu9ABrAAIby...		3	0	MHRA	DISTRIBUTED		POM
		10	AAAnu9ABvAAJu...		3	0	MHRA	DISTRIBUTED		POM
		10	AAAnu9ABvAAJu...		3	0	MHRA	DISTRIBUTED		POM
		9	AAAnu9AAIAAO9...			0	MHRA	DISTRIBUTED		POM
		9	AAAnu9AAIAAO9...			0	MHRA	DISTRIBUTED		POM
		14	AAAnu9ABvAAJu...		3	13074	MHRA	DISTRIBUTED		POM
		15	AAAnu9ABrAAIb6...			349	MHRA	DISTRIBUTED		POM
		14	AAAnu9ABrAAIby...			21	MHRA	DISTRIBUTED		POM
		11	AAAnu9ABrAAIcB...			0	MHRA	DISTRIBUTED		POM
		11	AAAnu9ABrAAIby...			0	MHRA	DISTRIBUTED		POM
		9	AAAnu9ABrAAIby...		1	1286	MHRA	DISTRIBUTED		POM
		9	AAAnu9ABrAAIb1...		1	1286	MHRA	DISTRIBUTED		POM
		9	AAAnu9AAuAALd...		1	1286	MHRA	DISTRIBUTED		POM
		9	AAAnu9AAuAALd...		1	1286	MHRA	DISTRIBUTED		POM
		9	AAAnu9AAuAALd...		1	1286	MHRA	DISTRIBUTED		POM
		10	AAAnu9ABrAAIcB...			8438	MHRA	DISTRIBUTED		POM
		10	AAAnu9ABrAAIb/...			8438	MHRA	DISTRIBUTED		POM

Design Specification: PLPI Assembly Control Software VMP/A5/0007/09/v12

3. Product add:

Product Add

☐ MHRA
 ☐ IMB
 ☐ EMA
 ☐ HP
 ☐ Diagnostic

	Foreign Leaflet Date	Approved Carton Link	Peel Out Label Link	SAMPLE_SENT	ACTION_COU	ACTION_REAS	FOREIGN_ECM	FLAG	GTIN	HUB_STATUS	WFIMLEMENT
*											

Save Remove Selected Row

Product Add

☐ MHRA
 ☐ IMB
 ☐ EMA
 ☐ HP
 ☐ Diagnostic

	Foreign Leaflet Date	Approved Carton Link	Peel Out Label Link	SAMPLE_SENT	ACTION_COU	ACTION_REAS	FOREIGN_ECM	FLAG		HUB_STATUS	WFIMLEMENT
*											

Save Remove Selected Row

Design Specification: PLPI Assembly Control Software

VMP/A5/0007/09/v12

4. Release log sheet

Release Log Sheet

Product : BNS Batch No : Site :

Select	ROOM_NO	PRODUCTION_CH	GTIN	REGULATORY	LEGAL_CATEGOR	QA REMARK
☐				MHRA	POM	
☐			050562258...	MHRA	POM	
☐				MHRA	POM	
☐			050562258...	MHRA	POM	
☐			050562258...	MHRA	POM	
☐				MHRA	POM	
☐				MHRA	POM	
☐			050562258...	MHRA	POM	
☐			050562258...	MHRA	POM	
☐				MHRA	POM	
☐				MHRA	POM	
☐				MHRA	POM	
☐			050562258...	MHRA	POM	
☐				DIAGNOSTIC	NOT APPLIC...	

Total Batches : 138 Total Quantity : 38290

Release For :
☒ Preview

Scan Barcode For Selection

Release Log Sheet

Product : BNS Batch No : Site :

Select	ROOM_NO	PRODUCTION_CH	REGULATORY	LEGAL_CATEGOR	QA REMARK
☐			MHRA	POM	
☐			MHRA	POM	
☐			MHRA	POM	
☐			MHRA	POM	
☐			MHRA	POM	
☐			MHRA	POM	
☐			MHRA	POM	
☐			MHRA	POM	
☐			MHRA	POM	
☐			MHRA	POM	
☐			MHRA	POM	
☐			MHRA	POM	
☐			MHRA	POM	
☐			MHRA	POM	
☐			DIAGNOSTIC	NOT APPLIC...	

Total Batches : 138 Total Quantity : 38290

Release For :
☒ Preview

Scan Barcode For Selection

Design Specification: PLPI Assembly Control Software VMP/A5/0007/09/v12

5. Pre QP

Pre QP

RID : BNS Batch No : Release Date : On Hold ☐ **Search**

Select	CONTRACT	PREQNOTE	RESPONSIBLE_DEPT	ON_HOLD_BY_QP	ON_HOLD_DATE	GTIN	LEGAL_CAT
☒	WHO					050562258...	POM
☐	WHO-G						POM
☐	WHO-G					050562258...	POM

Total Batches : 3 Total Quantity : 205

Select All **Commission** **Batch History**

Pre QP

RID : BNS Batch No : Release Date : On Hold ☐ **Search**

Select	CONTRACT	PREQNOTE	RESPONSIBLE_DEPT	ON_HOLD_BY_QP	ON_HOLD_DATE	GTIN	LEGAL_CAT
☒	WHO						POM
☐	WHO-G						POM
☐	WHO-G						POM


Total Batches : 3 Total Quantity : 205

Select All **Commission** **Batch History**


Design Specification: PLPI Assembly Control Software

VMP/A5/0007/09/v12

3.2 Remove certain columns from Product module

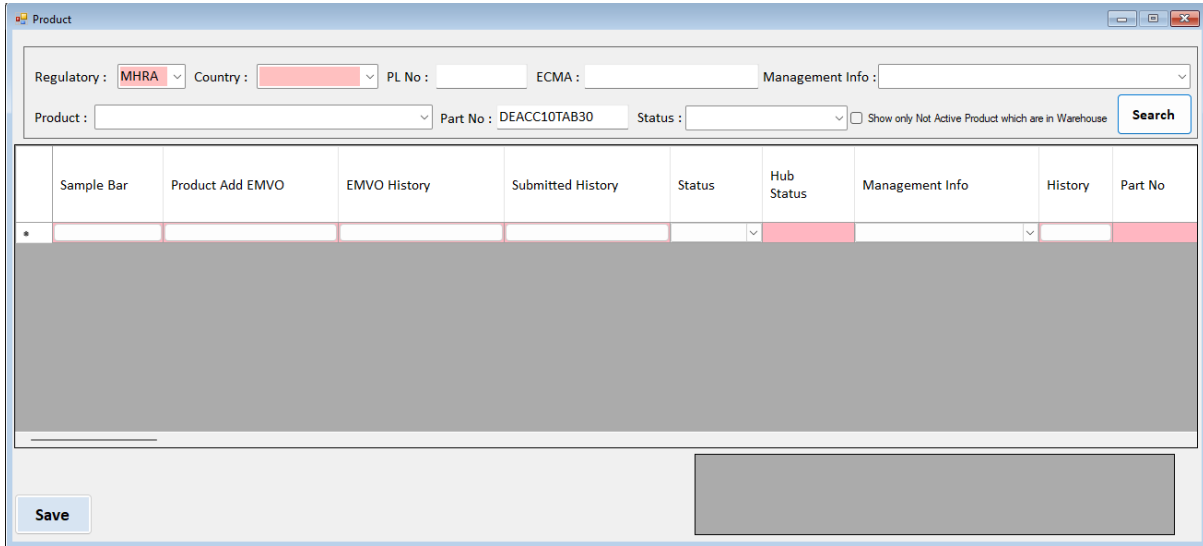

The screenshot shows the 'Product' module interface. The top section contains search filters: Regulatory (MHRA), Country (), PL No (), ECMA (), Management Info (), Product (), Part No (DEACC10TAB30), Status (), and a checkbox for 'Show only Not Active Product which are in Warehouse'. A 'Search' button is on the right. Below the filters is a table with the following columns: Sample Bar, Product Add EMVO, EMVO History, Submitted History, Status, Hub Status, Management Info, History, and Part No. The table is currently empty, showing only a header row and a single data row with a red background. A 'Save' button is located at the bottom left of the table area.

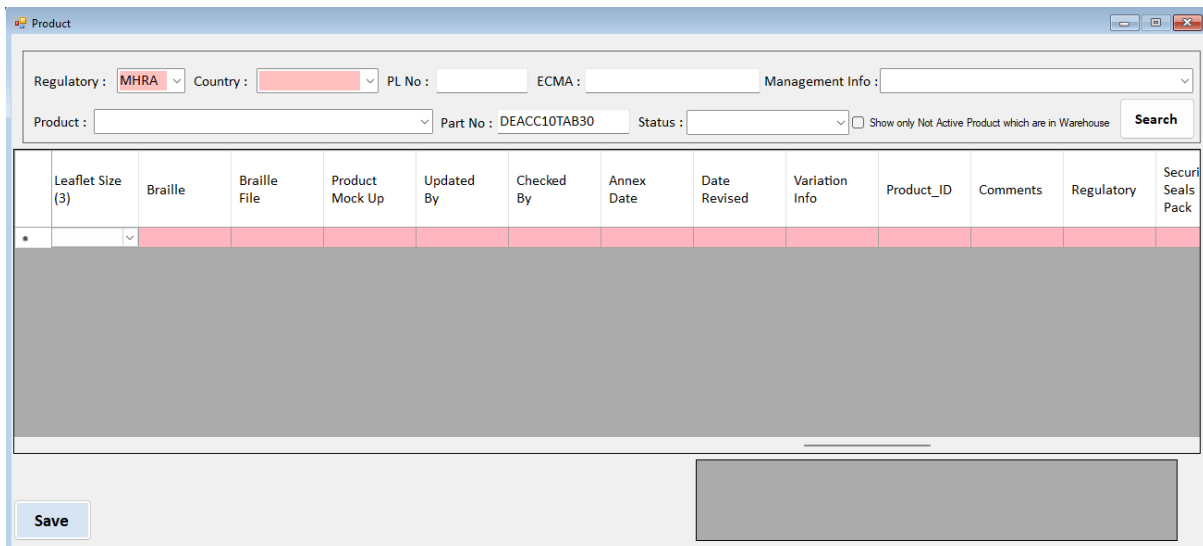

The screenshot shows the 'Product' module interface. The top section contains search filters: Regulatory (MHRA), Country (), PL No (), ECMA (), Management Info (), Product (), Part No (DEACC10TAB30), Status (), and a checkbox for 'Show only Not Active Product which are in Warehouse'. A 'Search' button is on the right. Below the filters is a table with the following columns: Leaflet Size (3), Braille, Braille File, Product Mock Up, Updated By, Checked By, Annex Date, Date Revised, Variation Info, Product_ID, Comments, Regulatory, and Security Seals Pack. The table is currently empty, showing only a header row and a single data row with a red background. A 'Save' button is located at the bottom left of the table area.

Product Add Emvo, EMVO History, Submitted History, Hub Status & Annex Date will not be displayed to the user.

Design Specification: PLPI Assembly Control Software

VMP/A5/0007/09/v12

Product

Regulatory: **MHRA** Country: PL No: ECMA: Management Info:

Product: Part No: **DEACC10TAB30** Status: ☐ Show only Not Active Product which are in Warehouse **Search**

	CHECK LIST MASTER BAR VERIFICATION	Sample Bar	Status	Management Info	History	Part No
*						

Save

Product

Regulatory: **MHRA** Country: PL No: ECMA: Management Info:

Product: Part No: **DEACC10TAB30** Status: ☐ Show only Not Active Product which are in Warehouse **Search**

	Leaflet Size (3)	Braille	Braille File	Product Mock Up	Updated By	Checked By	Date Revised	Variation Info	Product_ID	Comments	Regulatory	Secur Seals Pack
*												

Save

3.3 Check list – Master BAR Verification

Product

Regulatory: **MHRA** Country: PL No: ECMA: Management Info:

Product: Part No: **DEACC10TAB30** Status: ☐ Show only Not Active Product which are in Warehouse **Search**

	CHECK LIST MASTER BAR VERIFICATION	Sample Bar	Status	Management Info	Windsor Framework	History	Part No
*							

Save

Click on Check list Master BAR verification, the template will open to print.

Design Specification: PLPI Assembly Control Software
VMP/A5/0007/09/v12
Check List: MASTER BAR VERIFICATION


License Details	Verified (Yes/No or N/A)	Found satisfactory in PI System (Yes/No or N/A)
Product Name		
Strength		
Pack size		
ECMA No		
PL No		
Variation information (Tick- Yes/No)		
New Application (Tick- Yes/No)		

Comments:**Approved By:**

Name	Signature	Date (DD/MMM/YYYY)

Design Specification: PLPI Assembly Control Software VMP/A5/0007/09/v12

3.4 Hide modules – FMD Print Label, EMVO Reports, Product EMVO Reports, Decommissioning, EMVO Stolen and Intended for Destruction, External Batch Summary & External Batch Scanning

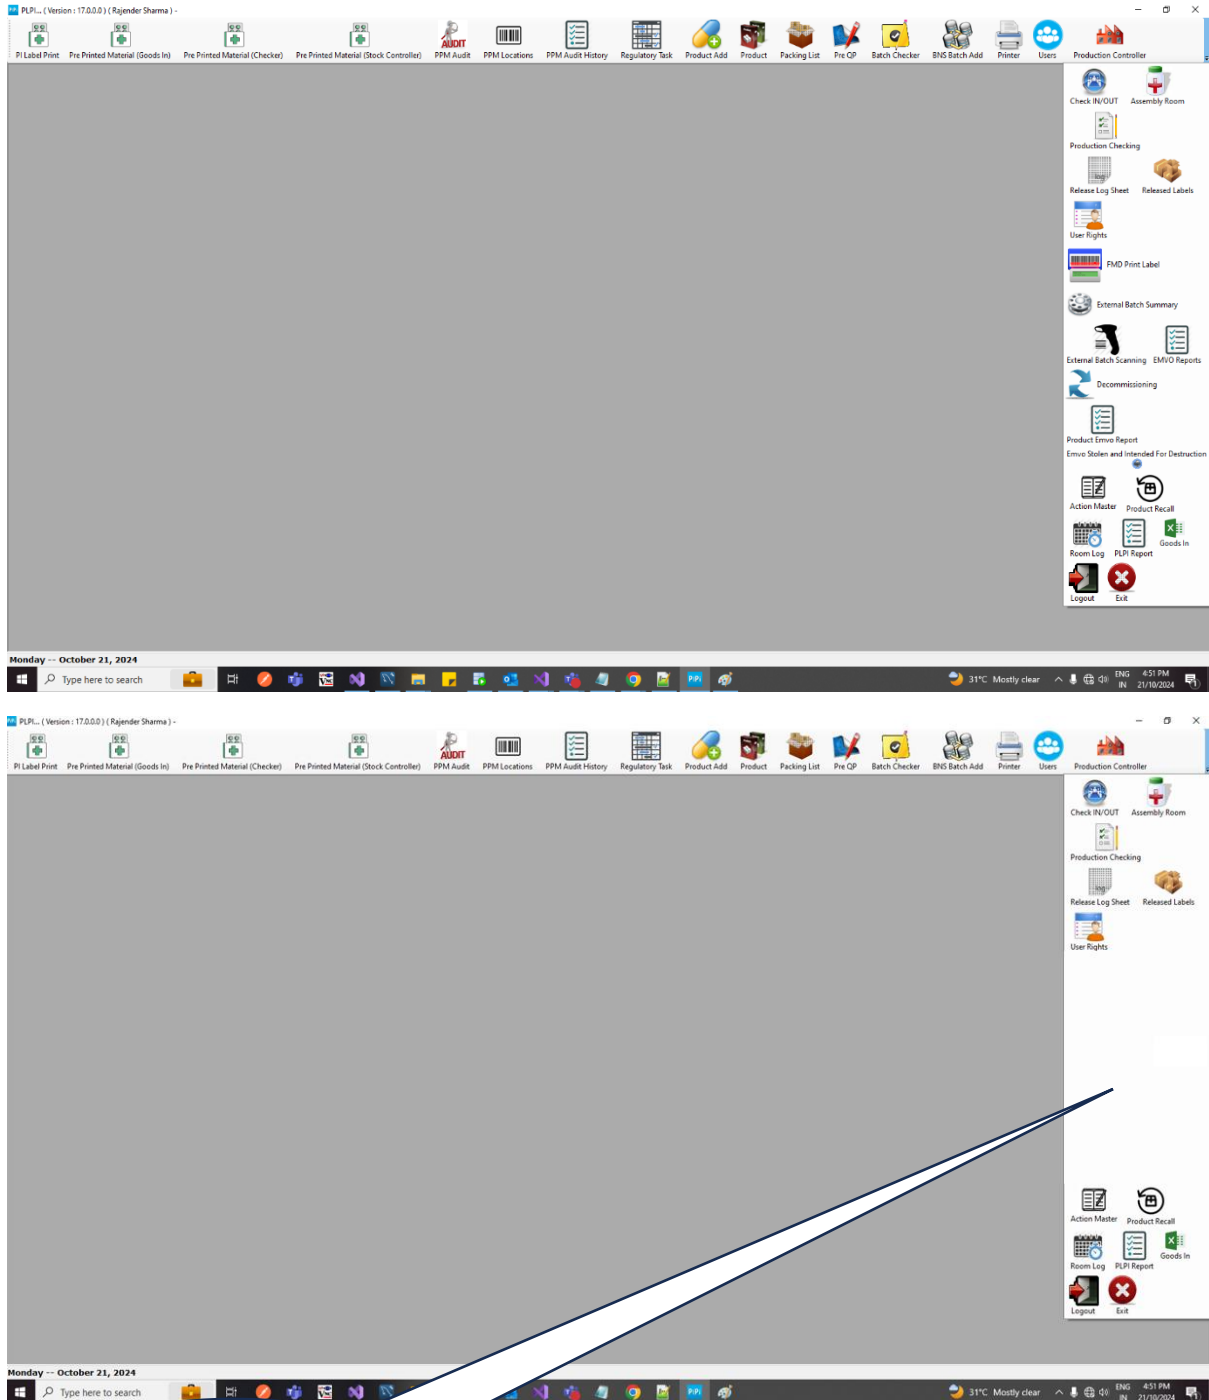

Modules will not be displayed to the user.

Design Specification: PLPI Assembly Control Software

VMP/A5/0007/09/v12

3.5 Changes like Removal & Adding of fields to be made in the Master BAR and Sample BAR

Batch Assembly Record			
Product Name	Neupro transdermal patch		B&S Batch Number 10X0010
Foreign Name	Neupro		 GTIN
Strength	2mg/24h		Expiry Date
Pack Size	28		03/2026
ECMA / EU Number	EU/1/05/331/001-EL (REBOX FROM 001 TO 28S)		
PL No	18799/3477	Units per pack	28
Country of origin	GREECE		
Product Introduced	15 Jun 2021	Leaflet Date	24 Apr 2024
Date Revised	17 Jul 2024		
Variation Information (If Applicable)			

Batch Assembly Record			
Product Name	Neupro transdermal patch		B&S Batch Number 10X0010
Foreign Name	Neupro		
Strength	2mg/24h		Expiry Date
Pack Size	28		03/2026
ECMA			
PL No	18799/3477	Units per pack	28
Country of origin	GREECE		
Product Introduced	15 Jun 2021	Leaflet Date	24 Apr 2024
Date Revised	17 Jul 2024		
Variation Information (If Applicable)			

EU number & GTIN Number will not be displayed to the user in page 1 of Master BAR and Sample BAR

Design Specification: PLPI Assembly Control Software

VMP/A5/0007/09/v12

PROCESS 1

Issuing of batch assembly record, Refer: SOP/PLPI/0006

BAR Issuer check below details

- Ensure PCL sheet has been checked for completeness and invoice is attached
- Manufacturer and Foreign ECMA holder details has been checked
- Check that the following BAR information matches the product pack:
 - » Batch number and expiry date
 - » Product name, Strength, Pack size and ECMA/EU number

This batch is:

Consolidated

☒

Composite

☒

Controlled Drug

☒

Cold Chain

☒

BAR Created By

Juston Nazareth Rodri

Date

01 Oct 2024

Confirm By

(Initial & Date)

Comments

Checked & Confirmed
(By Ticking √/X)

Supplier's Name	Review Date	Expiry Date	Invoice	Manuf. lot no	Qty	Line clearance Initial, Date & Time
PHARMASTOCK SA	05/06/2024	03/04/2025	1394	60649114	55	
Total :					55	

BAR V26 08-2024

Page 1 of 13

PROCESS 1

Issuing of batch assembly record, Refer: SOP/PLPI/0006

BAR Issuer check below details

- Ensure PCL sheet has been checked for completeness and invoice is attached
- Batch number and expiry date
- Product name, Strength, Pack size and ECMA/EU number

This batch is:

Consolidated

☒

Composite

☒

Controlled Drug

☒

Cold Chain

☒

BAR Created By

Juston Nazareth Rodri

Date/

01 Oct 2024, 9:00

Confirm By

(Initial & Date)

Comments

Checked & Confirmed
(By Ticking √/X)

Supplier's Name	Review Date	Expiry Date	Supplier Invoice	Manuf. lot no	Qty	Line clearance Initial, Date & Time
PHARMASTOCK SA	05/06/2024	03/04/2025	1394	60649114	55	
Total :					55	

BAR V26 08-2024

Page 1 of 13

Invoice column will be changed to Supplier Invoice and Time will be added in the Date column i.e., Date/Time

Design Specification: PLPI Assembly Control Software

VMP/A5/0007/09/v12

3.6 Delink/Remove Retention sample and Commission

Release Log Sheet

Product : BNS Batch No : Site :

Select	ROOM_NO	PRODUCTION_CH	REGULATORY	LEGAL_CATEGOR	QA REMARK	Damage and Regulatory Sample
☒			MHRA	POM		
☐			MHRA	POM		
☐			MHRA	POM		
☐			MHRA	POM		
☐			MHRA	POM		
☐			MHRA	POM		
☐			MHRA	POM		
☐			MHRA	POM		
☐			MHRA	POM		
☐			MHRA	POM		
☐			MHRA	POM		
☐			MHRA	POM		
☐			MHRA	POM		
☐			MHRA	POM		
☐			DIAGNOSTIC	NOT APPLIC...		

Total Batches : 138 Total Quantity : 38290

Release For :

Scan Barcode For Selection

Release Log Sheet

Product : BNS Batch No : Site :

Select	ROOM_NO	PRODUCTION_CH	REGULATORY	LEGAL_CATEGOR	QA REMARK	Damage and Regulatory Sample
☒			MHRA	POM		
☐			MHRA	POM		
☐			MHRA	POM		
☐			MHRA	POM		
☐			MHRA	POM		
☐			MHRA	POM		
☐			MHRA	POM		
☐			MHRA	POM		
☐			MHRA	POM		
☐			MHRA	POM		
☐			MHRA	POM		
☐			MHRA	POM		
☐			MHRA	POM		
☐			MHRA	POM		
☐			DIAGNOSTIC	NOT APPLIC...		

Total Batches : 138 Total Quantity : 38290

Release For :

Scan Barcode For Selection

Retention Sample from Release log sheet will be delinked/removed

Design Specification: PLPI Assembly Control Software

VMP/A5/0007/09/v12

Pre QP

RID : BNS Batch No : Release Date :
 On Hold ☐

Select	CONTRACT	PREQNOTE	RESPONSIBLE_DEPT	ON_HOLD_BY_QP	ON_HOLD_DATE	LEGAL_CAT
☒	WHO					POM
☐	WHO-G					POM
☐	WHO-G					POM

Total Batches : 3 Total Quantity : 205

Pre QP

RID : BNS Batch No : Release Date :
 On Hold ☐


Select	CONTRACT	PREQNOTE	RESPONSIBLE_DEPT	ON_HOLD_BY_QP	ON_HOLD_DATE	LEGAL_CAT
☒	WHO					POM
☐	WHO-G					POM
☐	WHO-G					POM

Total Batches : 3 Total Quantity : 205

Commission from PreQP module will be delinked/removed


Design Specification: PLPI Assembly Control Software VMP/A5/0007/09/v12

3.7 Windsor Framework in Product module and Alert pop-up in BNS Batch Add

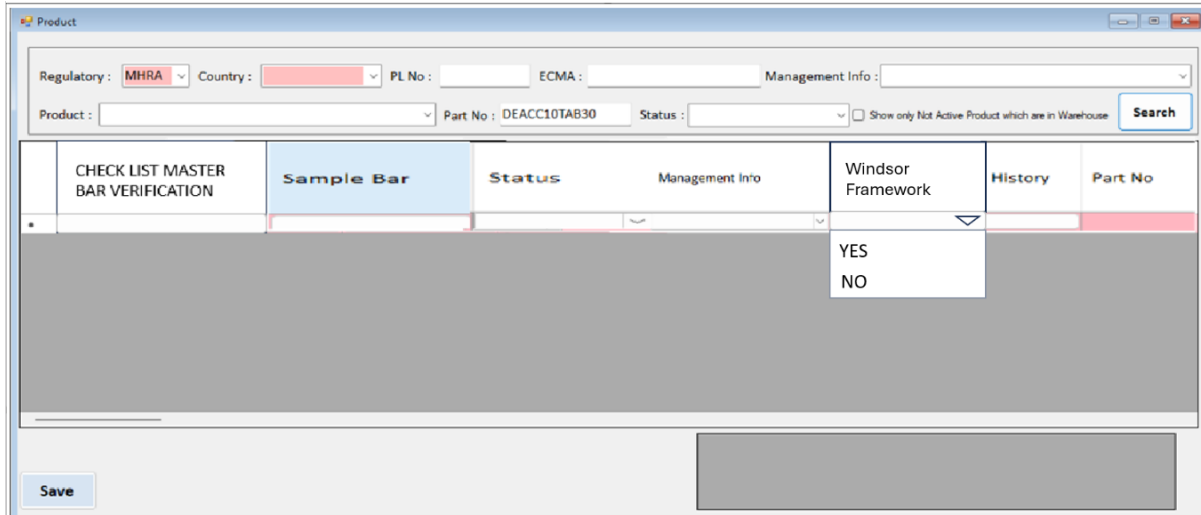

The screenshot shows the 'Product' module interface. At the top, there are input fields for 'Regulatory' (set to MHRA), 'Country', 'PL No', 'ECMA', and 'Management Info'. Below these are fields for 'Product' and 'Part No' (DEACC10TAB30), along with a 'Status' dropdown and a checkbox for 'Show only Not Active Product which are in Warehouse'. A 'Search' button is on the right. The main table has columns: 'CHECK LIST MASTER BAR VERIFICATION', 'Sample Bar', 'Status', 'Management Info', 'Windsor Framework', 'History', and 'Part No'. The 'Windsor Framework' column has a dropdown menu open, showing 'YES' and 'NO' options. A 'Save' button is at the bottom left.

Windsor Framework will be linked to the BNS Batch add module such as if the user selected 'Yes' system should allow to proceed further if selected 'No' system should not the user to proceed it should show a pop-up.

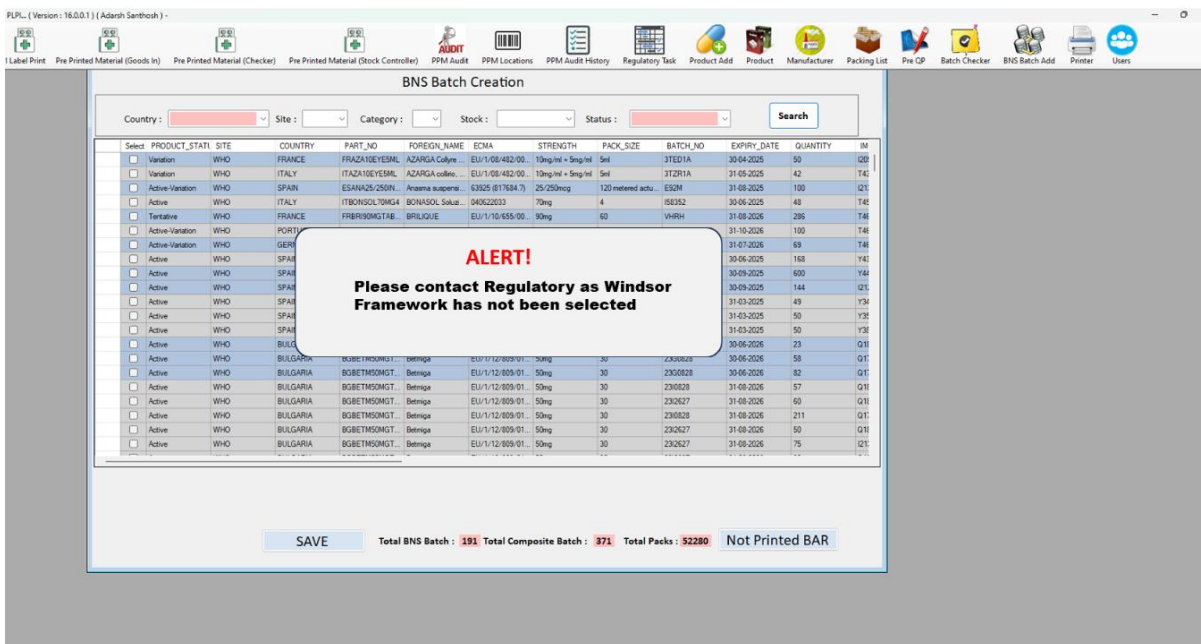


The screenshot shows the 'BNS Batch Creation' interface. At the top, there are input fields for 'Country', 'Site', 'Category', 'Stock', and 'Status', along with a 'Search' button. Below these is a table with columns: 'Select', 'PRODUCT_STAT', 'SITE', 'COUNTRY', 'PART_NO', 'FOREIGN_NAME', 'ECMA', 'STRENGTH', 'PACK_SIZE', 'BATCH_NO', 'EXPIRY_DATE', 'QUANTITY', and 'IM'. The table contains multiple rows of data. An alert pop-up is displayed in the center of the table, with the text: 'ALERT! Please contact Regulatory as Windsor Framework has not been selected'. At the bottom, there is a 'SAVE' button and a summary bar showing: 'Total BNS Batch : 191 Total Composite Batch : 371 Total Packs : 52280 Not Printed BAR'.

Design Specification: PLPI Assembly Control Software VMP/A5/0007/09/v12

3.8 Rename certain columns in Product add & Product module

1. Product Add Module

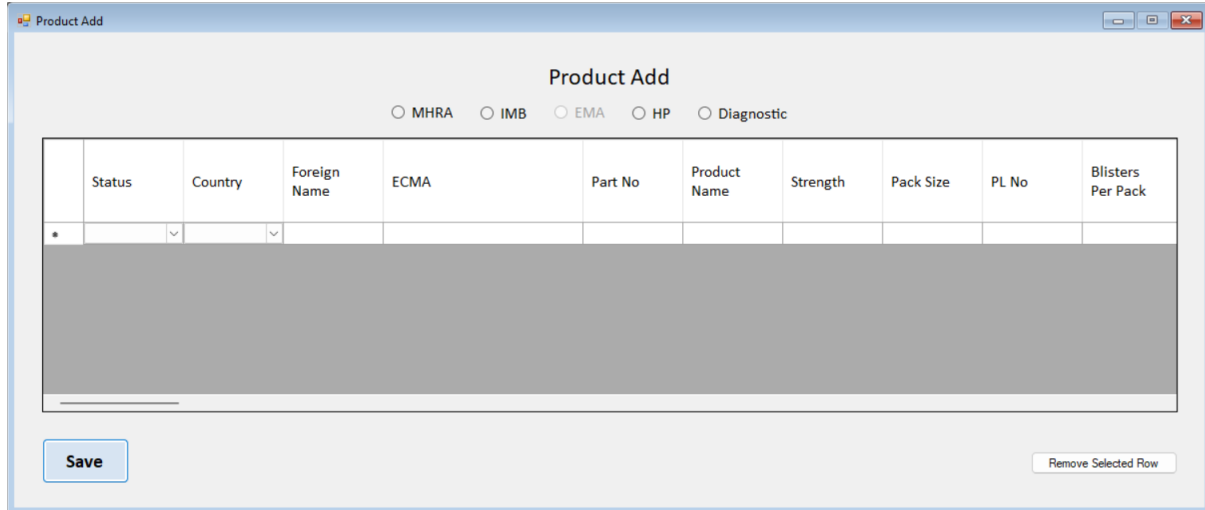


Product Add

☐ MHRA
 ☐ IMB
 ☐ EMA
 ☐ HP
 ☐ Diagnostic

	Status	Country	Foreign Name	ECMA	Part No	Product Name	Strength	Pack Size	PL No	Blisters Per Pack
*										

Save Remove Selected Row

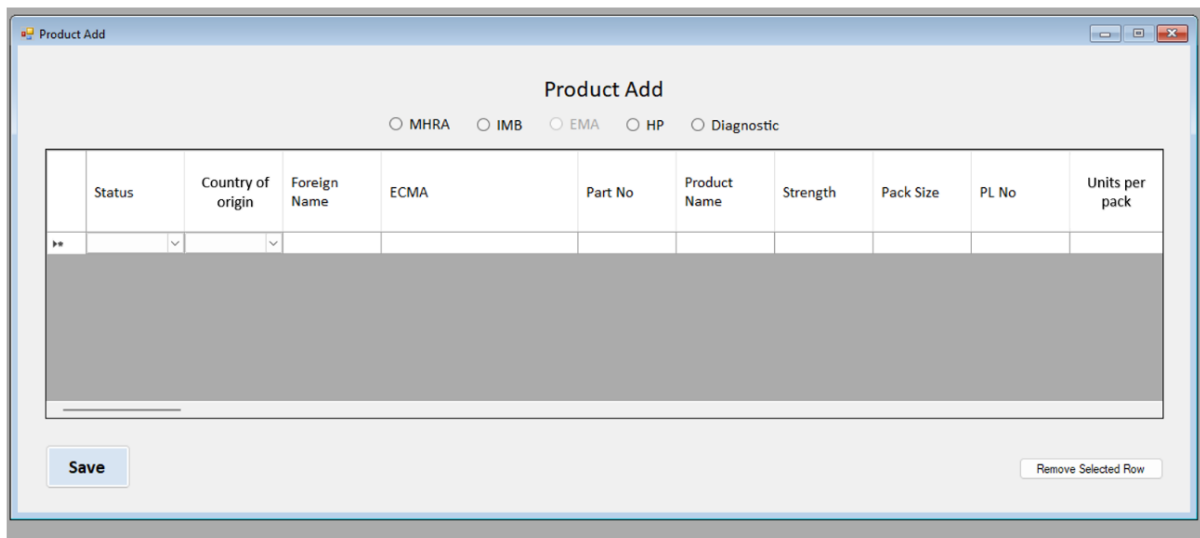

Product Add


☐ MHRA
 ☐ IMB
 ☐ EMA
 ☐ HP
 ☐ Diagnostic

	Status	Country of origin	Foreign Name	ECMA	Part No	Product Name	Strength	Pack Size	PL No	Units per pack
**										

Save Remove Selected Row

Design Specification: PLPI Assembly Control Software VMP/A5/0007/09/v12

2. Product Module

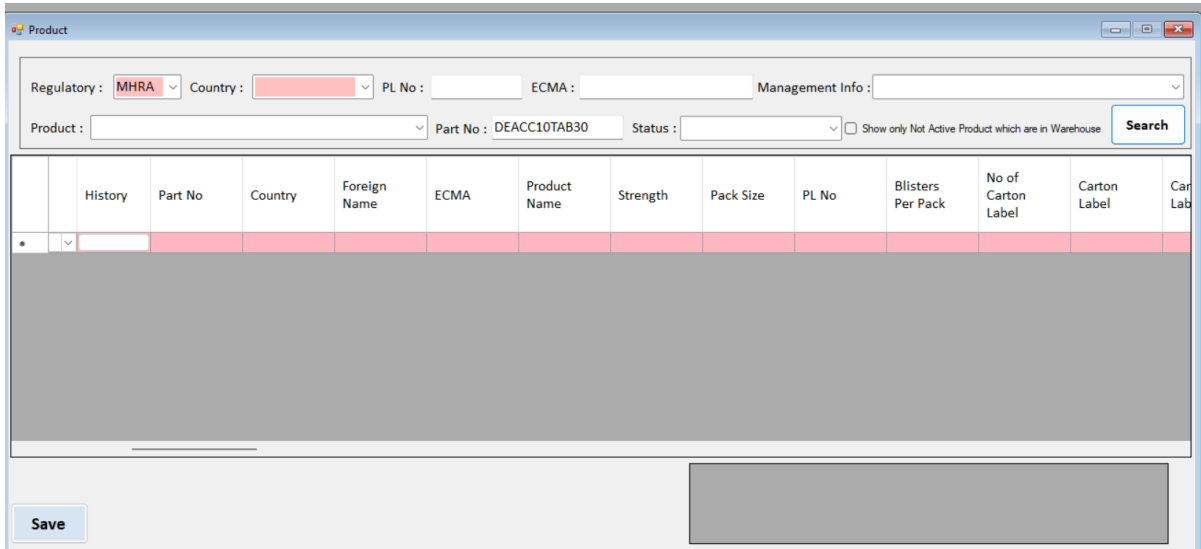


Product

Regulatory : **MHRA** Country : Country PL No : ECMA : Management Info : Management Info

Product : Product Part No : DEACC10TAB30 Status : Status ☐ Show only Not Active Product which are in Warehouse Search

	History	Part No	Country	Foreign Name	ECMA	Product Name	Strength	Pack Size	PL No	Blisters Per Pack	No of Carton Label	Carton Label	Cart Lab
*													

Save

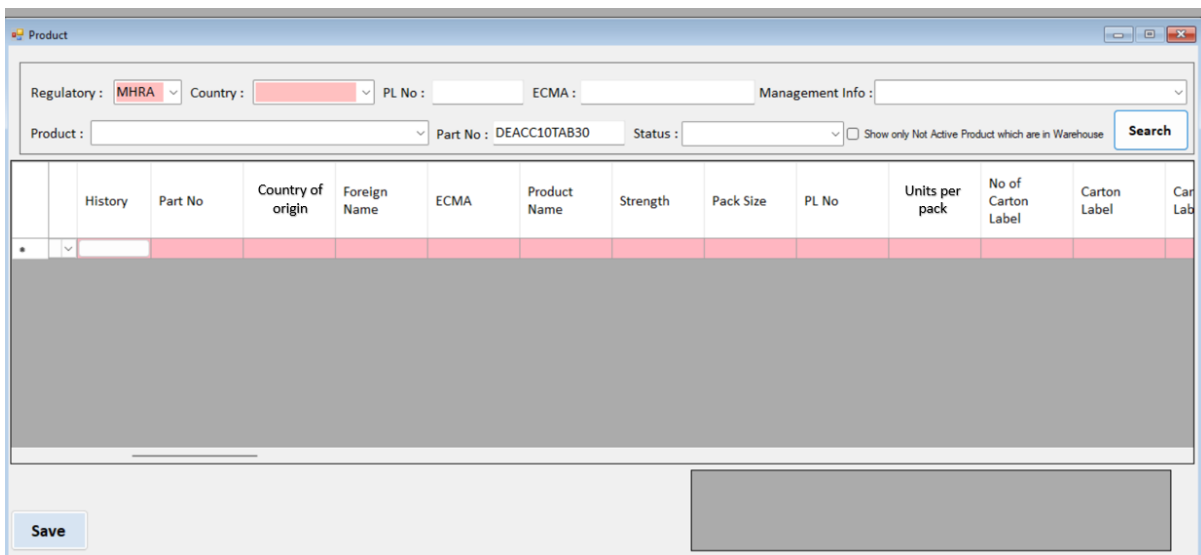

Product

Regulatory : **MHRA** Country : Country PL No : ECMA : Management Info : Management Info

Product : Product Part No : DEACC10TAB30 Status : Status ☐ Show only Not Active Product which are in Warehouse Search

	History	Part No	Country of origin	Foreign Name	ECMA	Product Name	Strength	Pack Size	PL No	Units per pack	No of Carton Label	Carton Label	Cart Lab
*													

Save

Columns will be renamed from Country to Country of Origin & Blisters per pack to Units per pack

Design Specification: PLPI Assembly Control Software VMP/A5/0007/09/v12

3.9 Found Satisfactory Alert in BNS Batch Add

PLPI - (Version : 16.0.0.1) (Adarsh Santhosh) -

PL Label Print Pre Printed Material (Goods In) Pre Printed Material (Checker) Pre Printed Material (Stock Controller) PPM Audit PPM Locations PPM Audit History Regulatory Task Product Add Product Manufacturer Packing List Pre CP Batch Checker BNS Batch Add Printer Users

BNS Batch Creation

Country : Site : Category : Stock : Status :

Select	PRODUCT_STAT	SITE	COUNTRY	PART_NO	FOREIGN_NAME	ECMA	STRENGTH	PACK_SIZE	BATCH_NO	EXPIRY_DATE	QUANTITY	IM
☐	Variation	WHO	FRANCE	FRANZANVEESM	AZARGA Collye...	EU/1/08/482/00	10mg/ml + 5mg/ml	5ml	312ED1A	30-04-2025	50	T42
☐	Active-Variation	WHO	ITALY	ITAZANVEESM	AZARGA collye...	EU/1/08/482/00	10mg/ml + 5mg/ml	5ml	312ED1A	31-05-2025	42	T42
☐	Active	WHO	SPAIN	ESANAS25-200N	Anasana suspensi...	S3925 (817684.7)	25-250mg	120 metered actu...	E32N	31-08-2026	100	Q25
☐	Active	WHO	ITALY	ITBONZOL70MG4	BONASOL Solusi...	040522033	70mg	4	88352	30-06-2025	48	T48
☐	Tentative	WHO	FRANCE	FRANZANVEESM	AZARGA Collye...	EU/1/08/482/00	10mg/ml + 5mg/ml	5ml	312ED1A	31-08-2026	286	T48
☐	Active-Variation	WHO	PORTUGAL	PTAZANVEESM	AZARGA Collye...	EU/1/08/482/00	10mg/ml + 5mg/ml	5ml	312ED1A	31-10-2026	100	T48
☐	Active-Variation	WHO	GERMANY	DEAZANVEESM	AZARGA Collye...	EU/1/08/482/00	10mg/ml + 5mg/ml	5ml	312ED1A	31-07-2026	69	T48
☐	Active	WHO	SPAIN	ESANAS25-200N	Anasana suspensi...	S3925 (817684.7)	25-250mg	120 metered actu...	E32N	30-06-2025	168	Y45
☐	Active	WHO	SPAIN	ESANAS25-200N	Anasana suspensi...	S3925 (817684.7)	25-250mg	120 metered actu...	E32N	30-09-2025	600	Y44
☐	Active	WHO	SPAIN	ESANAS25-200N	Anasana suspensi...	S3925 (817684.7)	25-250mg	120 metered actu...	E32N	30-09-2025	144	Q25
☐	Active	WHO	SPAIN	ESANAS25-200N	Anasana suspensi...	S3925 (817684.7)	25-250mg	120 metered actu...	E32N	31-03-2025	49	Y38
☐	Active	WHO	SPAIN	ESANAS25-200N	Anasana suspensi...	S3925 (817684.7)	25-250mg	120 metered actu...	E32N	31-03-2025	50	Y38
☐	Active	WHO	SPAIN	ESANAS25-200N	Anasana suspensi...	S3925 (817684.7)	25-250mg	120 metered actu...	E32N	31-03-2025	50	Y38
☐	Active	WHO	BULGARIA	BGBETMSNGT...	Betmiga	EU/1/12/809/01	50mg	30	236823	30-06-2026	23	Q17
☐	Active	WHO	BULGARIA	BGBETMSNGT...	Betmiga	EU/1/12/809/01	50mg	30	236827	30-06-2026	58	Q17
☐	Active	WHO	BULGARIA	BGBETMSNGT...	Betmiga	EU/1/12/809/01	50mg	30	236827	30-06-2026	82	Q17
☐	Active	WHO	BULGARIA	BGBETMSNGT...	Betmiga	EU/1/12/809/01	50mg	30	236827	31-08-2026	57	Q17
☐	Active	WHO	BULGARIA	BGBETMSNGT...	Betmiga	EU/1/12/809/01	50mg	30	236827	31-08-2026	60	Q18
☐	Active	WHO	BULGARIA	BGBETMSNGT...	Betmiga	EU/1/12/809/01	50mg	30	236827	31-08-2026	211	Q17
☐	Active	WHO	BULGARIA	BGBETMSNGT...	Betmiga	EU/1/12/809/01	50mg	30	236827	31-08-2026	50	Q18
☐	Active	WHO	BULGARIA	BGBETMSNGT...	Betmiga	EU/1/12/809/01	50mg	30	236827	31-08-2026	75	Q25

Total BNS Batch : 191 Total Composite Batch : 371 Total Packs : 52280 Not Printed BAR

3.10 Raw products Scan column – Product Module

Product

Regulatory : Country : PL No : ECMA : Management Info :

Product : Part No : DEACC10TAB30 Status : ☐ Show only Not Active Product which are in Warehouse

	Leaflet Size (3)	Braille	Braille File	Product Mock Up	Raw products Scan	Updated By	Checked By	Annex Date	Date Revised	Variation Info	Product_ID	Comments	Regulatory	Secur Seals Pack
*														

Design Specification: PLPI Assembly Control Software
VMP/A5/0007/09/v12



PRODUCT CHECK LOG SHEET

Line clearance by PCL and Invoice issuer (Initial, time and Date): _____

Line clearance verification before batch checking (Initial, time and Date): _____

Controlled Drug Product: ☐

Cold Chain Product: ☒

Contract Supplier: _____ ☐

Product Name: _____ ☐

Strength & Pack Size: _____ ☐

ECMA: _____ ☐

Source Country: _____ ☐ Country of origin (if different from the Source Country): _____ ☐

Invoice No: _____ ☐

Have to add 'Raw Product scans' checked Yes / No here Beauty

Expiry: 05/2024 ☐

All packs are in good condition ☐

Number of boxes in this batch _____ ☐

Manufacturer: _____ ☐

Manufacturer Address: _____ ☐


Foreign Holder: _____ ☐

Foreign Importer: _____ ☐

Any Comments

Raw Packs scanned field with Yes/No will be highlighted & this form will be updated by QA only.

3.11 To generate 2 new modules - Raw Pack Scanning & Raw Pack Scanned Summary

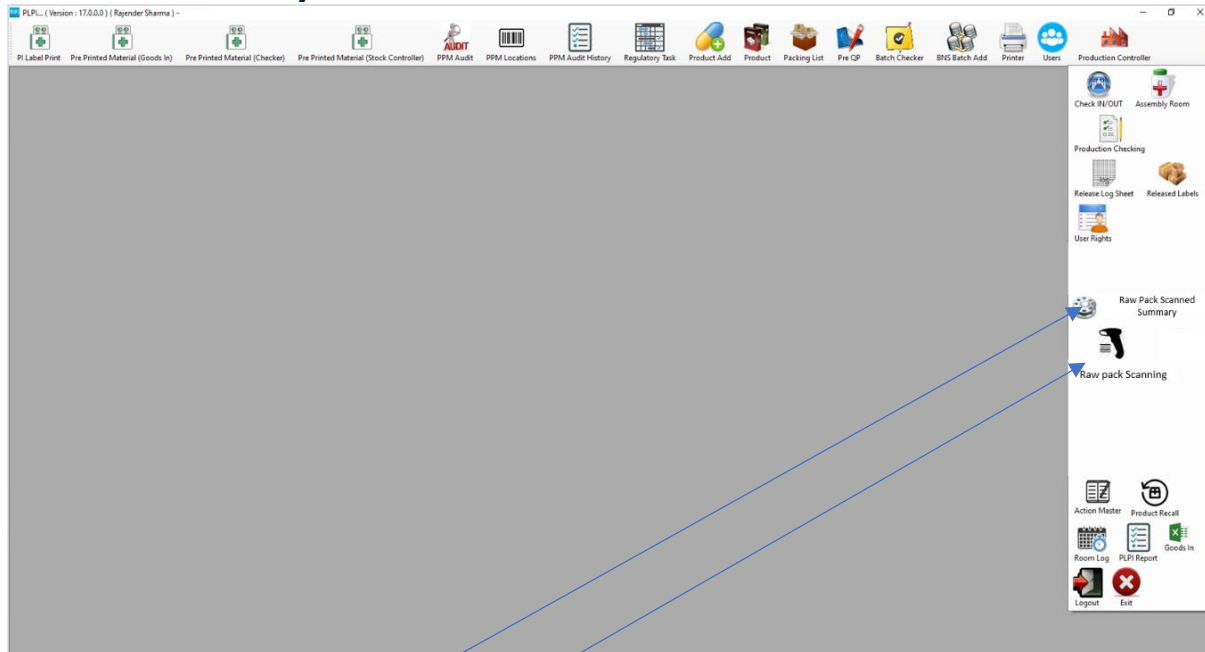

Raw Pack Scanning &
Raw Pack Scanned
Summary will be
displayed to the user.

**Design Specification: PLPI Assembly Control Software
VMP/A5/0007/09/v12**

3.12 Damage/Regulatory sample input column in Release log sheet

Release Log Sheet

Product : BNS Batch No : Site :

Select	ROOM_NO	PRODUCTION_CH	REGULATORY	LEGAL_CATEGOR	QA REMARK	Damage and Regulatory Sample
☐			MHRA	POM		
☐			MHRA	POM		
☐			MHRA	POM		
☐			MHRA	POM		
☐			MHRA	POM		
☐			MHRA	POM		
☐			MHRA	POM		
☐			MHRA	POM		
☐			MHRA	POM		
☐			MHRA	POM		
☐			MHRA	POM		
☐			MHRA	POM		
☐			MHRA	POM		
☐			MHRA	POM		
☐			DIAGNOSTIC	NOT APPLIC...		


Total Batches : 138 Total Quantity : 38290

Release For :

Scan Barcode For Selection

User can input the damage reason in the column.

3.13 Adding Print Mock-up button in BNS Batch Checker module and linked with Product module

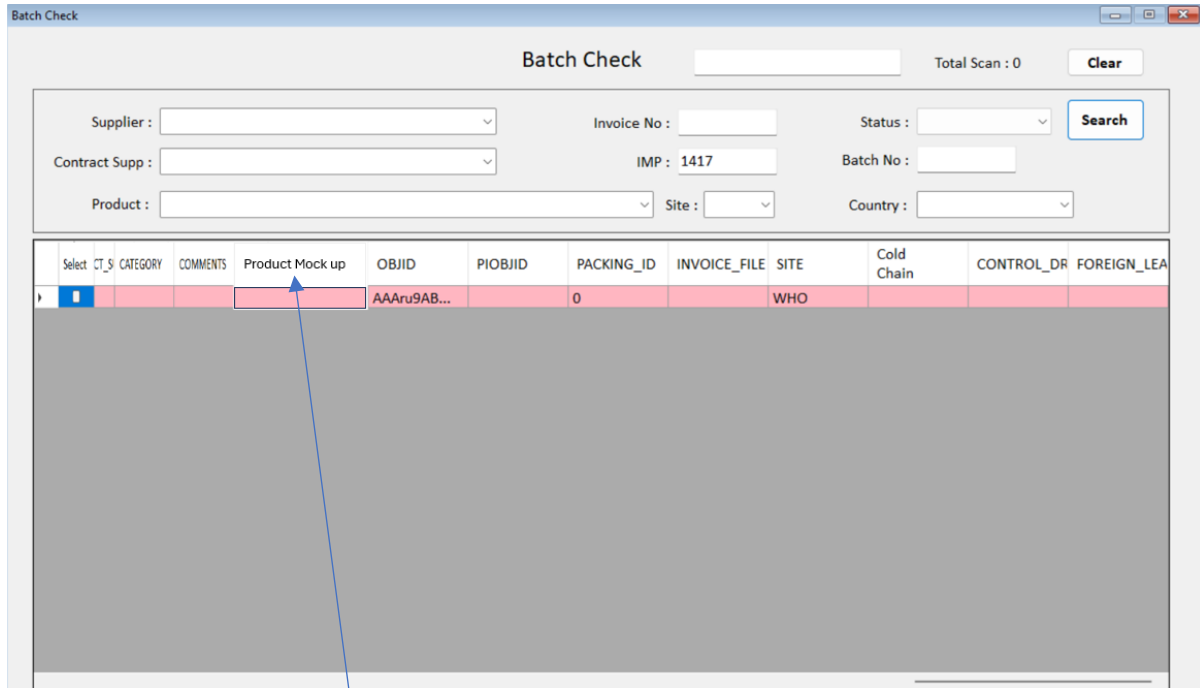

Select	CT_S	CATEGORY	COMMENTS	Product Mock up	OBJID	PIOBJID	PACKING_ID	INVOICE_FILE	SITE	Cold Chain	CONTROL_DR	FOREIGN_LEA
					AAAr9AB...		0		WHO			

Product mock up column will be displayed to the user and is linked with Product module

Design Specification: PLPI Assembly Control Software

VMP/A5/0007/09/v12

Addendum Requirement

3.2 Removal of statement from process 1 of the BAR

PROCESS 1
 Issuing of batch assembly record, Refer: SOP/PLPI/0006

BAR Issuer check below details

- Ensure PCL sheet has been checked for completeness and invoice is attached
- » Batch number and expiry date
- » Product name, Strength, Pack size and ECMA/EU number

This batch is:

Consolidated ☒ Composite ☒ Controlled Drug ☒ Cold Chain ☒

Product

BAR Created By: Juston Nazareth Rodri Date: 01 Oct 2024, 9:00 Confirm By (Initial & Date)

Comments

Supplier's Name	Review Date	Expiry Date	Supplier Invoice	Manuf. lot no	Qty	Line clearance Initial, Date & Time
PHARMASTOCK SA	05/06/2024	03/04/2025	1394	60649114	55	
Total :					55	

BAR V26 08-2024

Page 1 of 13

PROCESS 1
 Issuing of batch assembly record, Refer: SOP/PLPI/0006

BAR Issuer check below details

- Ensure PCL sheet has been checked for completeness and invoice is attached
- Batch number and expiry date
- Product name, Strength, Pack size and ECMA/EU number

This batch is:

Consolidated ☒ Composite ☒ Controlled Drug ☒ Cold Chain ☒

Product

BAR Created By: Juston Nazareth Rodri Date/ Time: 01 Oct 2024, 9:00 Confirm By (Initial & Date)

Comments

Supplier's Name	Review Date	Expiry Date	Supplier Invoice	Manuf. lot no	Qty	Line clearance Initial, Date & Time
PHARMASTOCK SA	05/06/2024	03/04/2025	1394	60649114	55	
Total :					55	


BAR V26 08-2024

Page 1 of 13

"Manufacturer and foreign ECMA holder details has been checked" & "Check that the following BAR information matches the product pack" statements has been removed.

Design Specification: PLPI Assembly Control Software VMP/A5/0007/09/v12

3.5 Add certain button PRINT APPROVED CARTON, PRINT PEEL OUT & PRINT BRAILLE in BNS Batch creation module

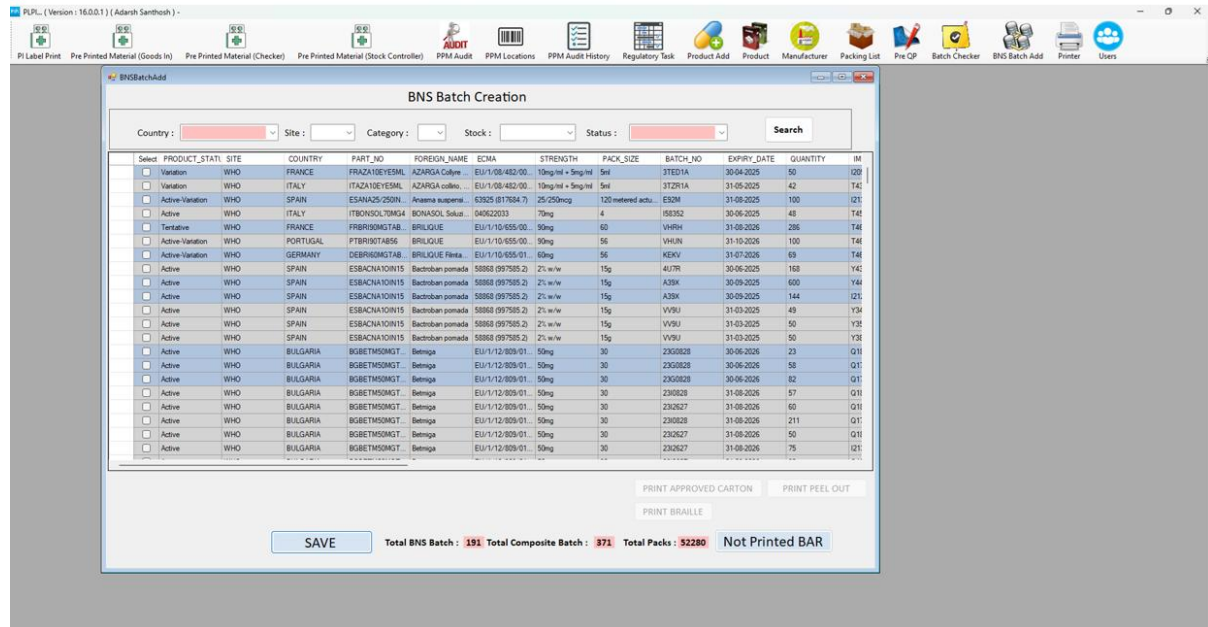

3.6 Update in process 8 of Master BAR and Sample BAR

BAR V26 08-2024

Page 8 of 13

In Process Checks				
	IPC	IPC	IPC	IPC
Product Name				
Strength				
Pack Size				
Blister per pack				
Mfg. Batch Number				
B&S Batch No.				
Expiry Date				
PL No. / EU No.				
Placement of labels applied are verified against the specimen pack (By Ticking ✓ / X)				
Time				
Confirmed By (Initial & Date)				

Use extra sheets if required

Product Name
Neuro transdermal patch

Strength
2mg/24h

Pack Size
28

PL No
18799/3477

ECMA / EU
EU/1/05/331/001-EL (REBOX FROM 001 TO 285)

10X0010

03/2026

Product Name, Strength Pack size, Blister per pack, Mfg. Batch Number, B&S Batch No., Expiry Date & PL No. /EU No. will be filled by default.

Design Specification: PLPI Assembly Control Software

VMP/A5/0007/09/v12

4.0 Additional Non-Functional Requirements

URS ID	Function/Feature	Description/Specification
3.12.1	Damage/Regulatory sample input column in QP Release Log record	Damage/Regulatory column will be added in the QP Release log record
3.12.2	Assembled Quantity in Qty issue Column	QP Release log sheet will display Assembled Quantity in Qty issued Column
URS: 3.1 (addendum)	QP Release Log Record	Allow the user to merge the columns like B&S and expiry date as "Batch No./Exp Date" and add country of origin in expiry date column
URS: 3.3 (addendum)	Update of required quantity and certain statements from Sample BAR & Master BAR	1. (n%1) +2 will be amended to (n%1) +1 2. Statement in process 4 will be changed from "Attach 2 random Pre-printed cartons to the reverse page of process 4" to "Attach 1 random Pre-printed carton for assembly"
3.4 (addendum)	Width Increase	Reference code column width will be increased in process 3,4,5,6 & 8 in the Master BAR and Sample BAR
3.7 (addendum)	Audit Trail for person – BNS Batch Summary Log	Audit trail of a person will be displayed in the Batch Summary log if relevant continuation page is printed
3.8 (addendum)	Increase in Character limitation	Limitation character will be increased to 80 in "Product" and "Regulatory log" modules

4.1 Audit Trail

For each order request from its creation to approval or rejection, whole request's audit log should be maintained.

4.2 Availability

The system should be available online **24*7*365 service**, with the exception of scheduled and pre-notified system maintenance down times.

Data should become immediately available for use, both during input and for reporting unless otherwise negotiated with the IT Hardware Team. The IT Hardware Team will ensure that system resources are adequate for timely report generation response times and overall software functionality. The IT Hardware will ensure that regular system maintenance is not completed during peak operation periods.

4.3 Capacity Limits

There is no limit on number of transactions, concurrent users. However, there must be facility that no 2 or more users can change the same action concurrently.

4.4 Performance

Checking the fact that the system should perform as what every user expects. So, in every action-response of the system, there are no immediate delays.

In case of opening windows forms, of popping error messages, saving the data to database, saving file over network shared drive, etc. should delay much below 20 seconds.

Assuming 100 users are working simultaneously then also it should give quick response.

4.5 Recoverability

For data and file recoverability our Database Administrators and Network Administrator periodically perform taking back-up practice. From that back-up important data and files will be recoverable any time.

4.6 Security Requirements

The system is hosted on B&S server at the Perivale site. Server rooms are access controlled to prevent unauthorised access and are protected by firewalls to ensure data security. All users are allocated a unique username and password and all actions are recorded within an audit trail

4.7 Error Handling

Checking that the system always has something to function and always pop-up error messages in case of component failure. In that case the error messages appear when something goes wrong so to prevail availability problems.

4.8 Usability

The system will be subject to user acceptance testing as part of the development process to ensure the user experience meets the requirements.

4.9 Accuracy & Validity

The system will employ numerous data quality assurance techniques, including but not limited to:

- Input masks
- Drop down lists with standard responses
- Record data completeness requirements
- Basic data logic warnings